
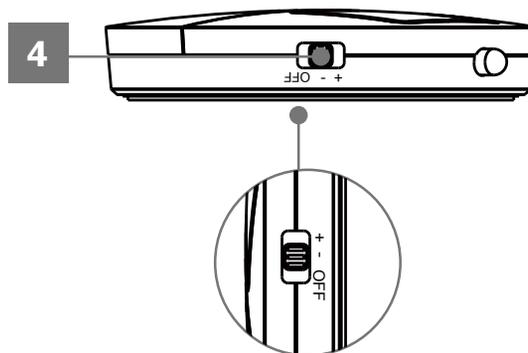


# NST003 Glass Break Alarm Manual

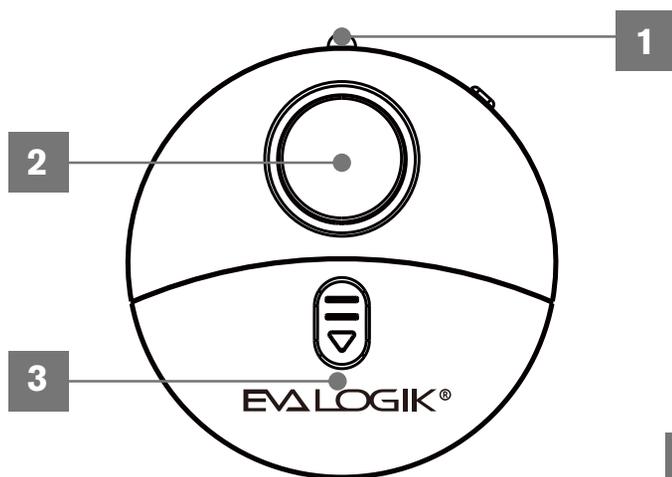

- 1. Status LED
- 2. Siren
- 3. Battery compartment
- 4. Switch

## SPECIFICATIONS :

Alarm: > 120dB SPL/30cm

Power Supply: 2 \* AAA batteries

Dim.: 78\*78\*16.49mm

## INSTALLATION :

1. Easy to install - no wiring, stick the alarm on any window or glass surface, warning words visible outside.
2. Turn the unit upside down and open the battery compartment install AAA\*2pcs batteries noting polar (not included) and close the compartment.
3. Place switch to the "-/+ " (low/high sensitivity selection) position to set up a defensive.
4. Low-battery indicator light, If you see the indicate red LED always on, then need replace new battery.

## OPERATION :

1. To arm the unit, open the battery compartment at the front of unit, install 2pcs AAA batteries and close it. Sliding the power switch to the "-/+ " position, and the device will emit a powerful 120-decibel alarm when the window or glass door is tampering or breakage and the alarm siren will sound continuously 60second.
2. LED blink every 4 seconds when switched "-/+ ".

3. You can adjust the sensitivity of the sensor by using the "+(high)/-(low)" switch.  
As a standard you should use the "+" testing. But depending on the surrounding sounds or when used on a sliding glass door, the alarm might be triggered without reason. In such cases reduce the sensitivity to "-". A breaking of the glass will still be detected.
4. To disarm the unit, toggle switch to "OFF" position.

**Note : To test, a cloth can be used to cover the alarm to reduce risk of hearing damage.**

### **CARE AND MAINTENANCE :**

To clean the unit housing, use a soft cloth slightly dampened with water and wipe dry. Do not use chemical agents as this may damage and discolor the unit.

### **IMPORTANT :**

Remove batteries before storing the Alarm for extended periods.  
Batteries corrode over time and may cause permanent damage to the unit.  
Different types of batteries or new and used batteries should not be mixed.  
Depleted batteries should be removed from the unit and disposed of properly.

**FOR INDOOR USE ONLY!  
DO NOT USE IN WET LOCATIONS!**

 <b>WARNING</b>
Risk of personal injury Prolonged exposure to alarm siren may cause permanent hearing loss.
 <b>CAUTION</b>
Batteries may leak harmful liquids or ignitable materials or explode causing injury and product damage
<ol style="list-style-type: none"><li>1. Do not mix old and new or other battery types.</li><li>2. Replace all batteries at the same time.</li><li>3. Replace fully discharged batteries immediately.</li></ol>