
EVALOGIK®

3-Way Wi-Fi Toggle Dimmer Switch

• WF31T •



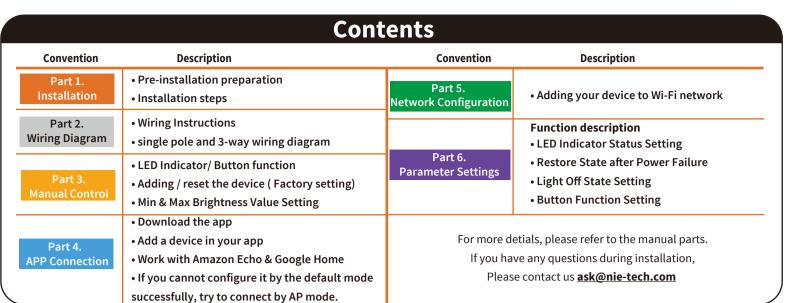


Part 1. Installation

X A Few Quick Reminders

A quick note before we give out the wiring schematics. Please do not try installing this device if you are unsure of how electrical circuits operate within your home. As exciting as it is to have a smart switch installed, it can be dangerous and even life-threatening if you do not install this correctly. Please consult a qualified electrician if necessary. With that said, here are a few other warnings we'd like to point out for your safety:




Air-Gap Switch: Stay at right for normal use Shift to left for Bulb replacement

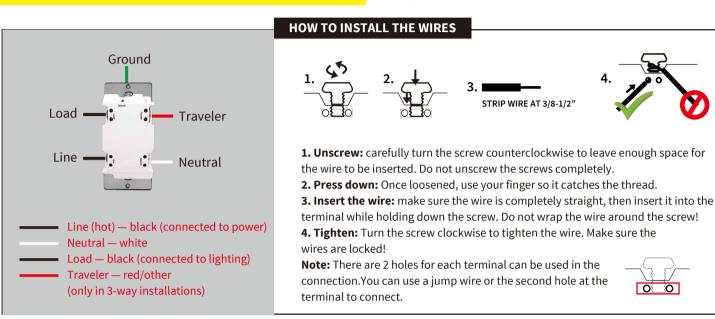

Note before installation

- 1) The Wi-Fi In-wall Smart Switch must not exceed **150W LED, 500W** incandescent.
- 2) The switch box required: 1-gang U.S. wall box. 3½ in deep recommended, 2¼ in deep minimum. (The switch is designed only for use with permanently installed fixtures.)
- 3) Work with regular 3-way on/off for 2 locations control. It can only be connected with regular 3-way on/off switch, don't use a smart switch or a dimmer switch! Couldn't work with an add-on switch! 4) The colors of your wires may not match the ones in our diagrams so please make sure you've **identified all wires correctly** based on
- their source, not color only.
- 5) Please check your original 3-way wiring circuit in your home before installation, and then follow the wiring diagram option 1 or 2 in
- 6) Install the smart switch in the switch box which directly connects to the power Line and Neutral. 7) This switch **requires a Neutral for installation**, or the installation will not succeed.
- 8) Not recommended for fan.

If you have any questions, please contact us at ask@nie-tech.com

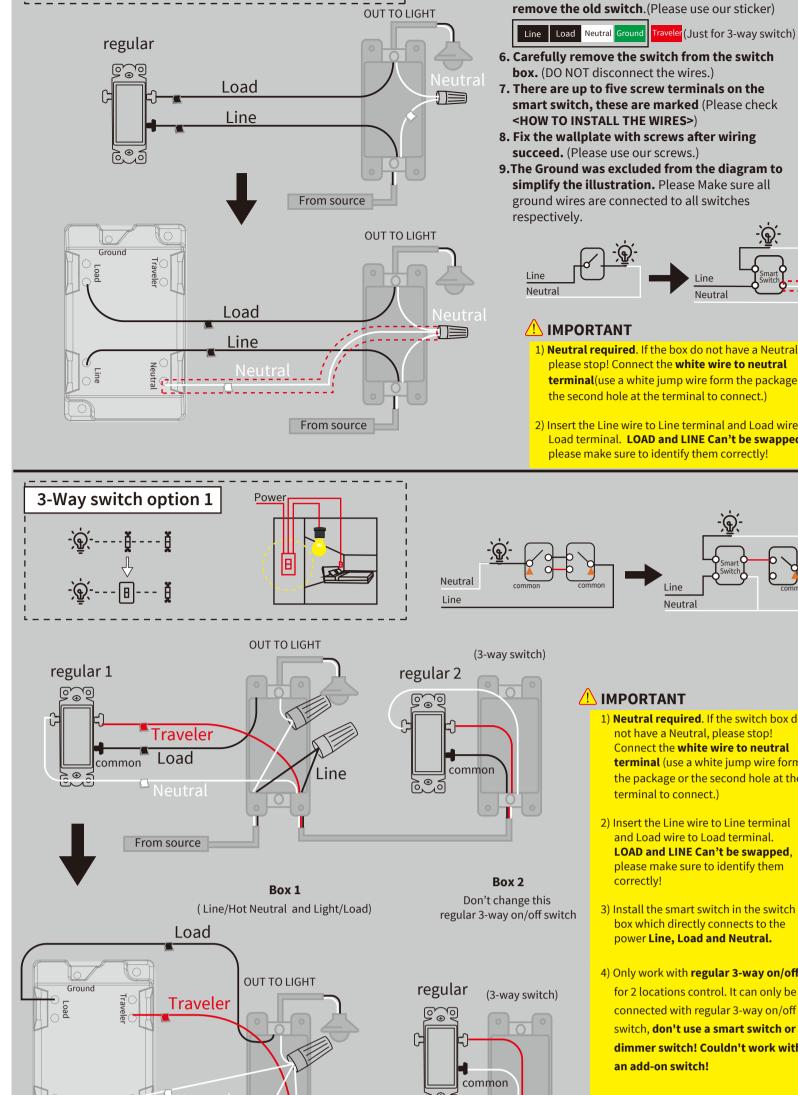

Power

Single-pole wiring

Line

Easy Mode:

Tap '+' to add a device

in your app

Click to "continue

AP mode:

2.4gHz

connect by AP mode

3) Click "Confirm light flashes."

connection to complete.

4) Enter Wi-Fi network password.

blue LED indicator flashes quickly.

From source

Part 4. APP Connection

Select "Electrician "-

Hold the "down" button more than 10s until the

bulb flashes and "BLUE" LED blinks rapidly. Please

Wait for the app to

connect to your Wi-Fi

until it's 100%

make sure the switch is on the "OFF" position.

Select "is fast blinking

(0.5s/time)'

is fast blinking (0.5s/time)

If you cannot configure it by the default mode successfully, try to

2) Click on "is slowly blinking(2s/time)" in the upper right corner.

5) Open wireless LAN settings with "SmartLife-xxxx/SL-xxxx".

6) Back in the application, continue adding devices and wait for the

AP Network Configuration Mode to Easy Mode: When the purple

LED indicator flashes quickly, press and hold the "down" button for

more than 5s until the bulb flashes 1 time to enter easy mode, and the

mode, and the purple LED indicator flashes quickly.

is fast blinking (0.5s/time)

is slowly blinking (2s/time)

The indicator is not flashing?

1) When the blue LED indicator flashes quickly, press and hold the down

button for more than 5s until the bulb flashes twice to enter the AP

"Dimmer Switch"

! IMPORTANT 1) **Neutral required**. If the box do not have a Neutral, please stop! Connect the white wire to neutral terminal(use a white jump wire form the package or the second hole at the terminal to connect.) 2) Insert the Line wire to Line terminal and Load wire to Load terminal. LOAD and LINE Can't be swapped, please make sure to identify them correctly! (3-way switch) **!** IMPORTANT 1) Neutral required. If the switch box do not have a Neutral, please stop! Connect the white wire to neutral terminal (use a white jump wire form the package or the second hole at the terminal to connect.) 2) Insert the Line wire to Line terminal and Load wire to Load terminal. LOAD and LINE Can't be swapped, please make sure to identify them correctly! Don't change this 3) Install the smart switch in the switch regular 3-way on/off switch box which directly connects to the power Line, Load and Neutral. 4) Only work with regular 3-way on/off regular (3-way switch) for 2 locations control. It can only be connected with regular 3-way on/off switch, don't use a smart switch or a dimmer switch! Couldn't work with an add-on switch!

None-connection

Enter the Wi-Fi Password

(Your phone should have

connected to the same

Click and edit the name

of switch!

Connect your mobile

phone to the device's

witch 🗹

Wi-Fi first).

Part 2. Wiring Diagram


1. Tool: Please prepare a flat head screwdriver.

4. Remove the switch mounting screws.

5. Disconnect the wires and label them after

3. Remove wallplate.

2. Turn power OFF at circuit breaker or fuse box.

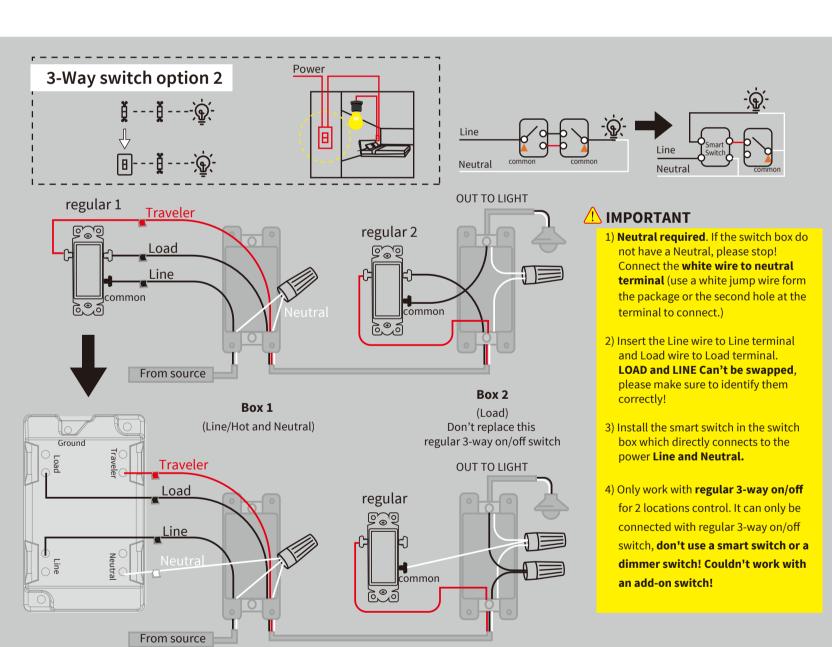

Part 3. Manual Control

- 1) Tap 1(Up button): turn on the light (the last brightness level) Press and hold (Up button): add brightness
- 2) Tap 1(Down button): turn off the light Press and hold ("down" button): reduce brightness.
- 3) Adding your device to Wi-Fi network:
- Please make sure the switch is on the "OFF" position. Hold the "down" button more than 10s until the bulb flashes and the"blue" LED blinks rapidly to initiate App-configured Mode.
- 4) If you need to reset the device (Factory setting)
- Network reset 1. Turn off the light (when the light is on)

Bluetooth quick-fit Mode:

2.Hold the "down" button until the light bulb flashes (the blue LED blinks rapidly)

Part 4. APP Connection

1. Please scan the QR code to download the application "Smart Life". 2. If you cannot download Smart Life app, please search "Smart Life" on Google Play (for Android phone) or Apple Store (for iOS phone) to download. After you download the Smart Life App and register a new account,

LED Indicator:

Red: Network failure

Blue: Network configuration mode

Purple: AP Network configuration mode

Orange: Light status indicator

please follow the instructions below to set up your smart switch. The smart switch can be also used with Amazon Echo and Google **Home**. Please scan the QR code below and follow the instructions you have any trouble pairing with them.



Please Note:

the below instructions.)

Device Reset / Network reset

configuration.



Choose the most suitable mode to configure the network.

Please operate quickly when "BLUE" LED indicator blinks rapidly.

Smart Life

Our products only support 2.4GHz Wi-Fi network.

step 1: turn off the light (when the light is on)



Amazon-Echo

3 connection network modes: **Bluetooth quick-fit Mode**, **Easy Mode**, **AP**

When indicator flash enters the network, complete standard operation


Make sure the switch works properly by manual control before network


"PURPLE" LED Flashing slowly enters AP Mode (select "AP Mode" follow








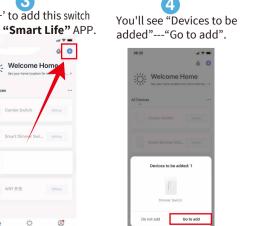


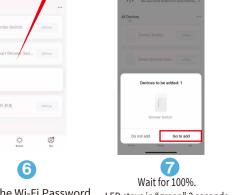

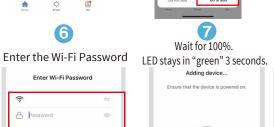



Add

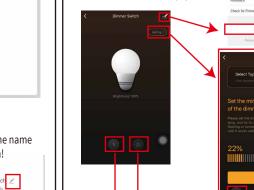

Edit **SETTING**

For better performance of the LED, please set a minimum brightness value. When the bulb is at this minimum brightness value, the bulb does not flicker. The minimum brightness of different bulbs may be

Part 5. Network Configuration

OPERATION GUIDE Adding your device to Wi-Fi network:

Please make sure the switch is on the "OFF" position. Hold the "down" button more than 10s until the bulb flashes and "blue" LED indicator blinks rapidly to initiate App-configured Mode. If you need to reset the device (Factory setting)

Network reset 1.Turn off the light(when the light is on)

2.Hold the "down" button more than 10s until the bulb flashes

("blue" LED indicator blinks rapidly)

The LED indicator flashes 3 times after each parameter setting successfully.) • LED Indicator Status Setting (This parameter can access you to choose the led indicator to be on when the switch (light) is on/off, or LED indicator remains on/off all times.)

Part 6. Parameter Settings

Value=1 (default) LED is On when the switch (light) Off and LED is Off when the switch (light) On. Value=2

LED is On when switch (light) On and LED is Off when

the switch (light) Off. LED is always Off.

LED is always On Operation: Quickly press "down" button 5 times.

Please note: the switching of each value is in order, a quick press ""down" button 5 times will switch once. eg: Switching from value1 to value 4 needs 3

• Restores State after Power Failure (This parameter can access you to set the switch to be on/off after power failure.) The switch is off regardless of the state prior to power

The switch is on regardless of the state prior to power

Value=3(default) Memory state before power failure This switch will be return to state prior to the power failure after power is restored. Operation: Quickly press "up" button 5 times.

Please note: the switching of each value is in order, a quick press "up" button 5 times will switch once. eg: Switching from value1 to value 3 needs

• Light off State Setting (This parameter can access you to set the light fade out or off immeditaly.

Value=1 (default) Fade out

Instantaneous off

Operation: Quickly press "up" button 8 times Please note: the switching of each value is in order, a quick press "up" button 8 times will switch once. eg: Switching from value1 to value 2 needs

• Button Function Setting (This parameter can access you to set the "up" button to turn the light on/off.)

Value=1 (default) The "up" button turn the light on and "down" button turn lights off.

The "up" button turn the light off and "down" button Value=2 turn lights on.

Operation: Quickly press "down" button 8 times

Please note: the switching of each value is in order, a quick press "down"

button 8 times will switch once. eg: Switching from value1 to value 2 needs 1

This device complies with part 15 of the FCC and Industry Canada license-exempt RSS standard(s). Operation is subjected to the following two conditions: (1) this device may not cause harmful interference, and (2) this

device must accept any interference received, including interference that may cause undesired operation.

FCC NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to

operate the equipment. - Reorient or relocate the receiving antenna. — Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from

that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is

determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: **Important note:** To comply with the FCC RF exposure compliance

requirements, no change to the antenna or the device is permitted. Any change to the antenna or the device could result in the device exceeding the RF exposure requirements and void user's authority to operate the device. (!) CAUTION - PLEASE READ!

This device (WF31T) is intended for installation in accordance

with the National Electric Code and local regulations in the United States, or the Canadian Electrical Code and local regulations in Canada. If you are unsure or uncomfortable about` performing this installation consult a qualified electrician. WARNING - SHOCK HAZARD

TURN OFF THE POWER to the circuit for the switch and lighting fixture at the service panel (circuit breaker) prior to installation. ALL WIRING CONNECTIONS MUST BE MADE WITH THE POWER OFF to avoid personal injury and/or damage to the switch.

Risk of Burns

V4.0

! OTHER WARNINGS Risk of Fire Risk of Electrical Shock

www.nie-tech.com

step 2: hold the "Down" button until the light bulb flashes (" BLUE"LED blinks rapidly) Locks for the minimum value Set a timer to the switch. Adjust the brightness of the light.